




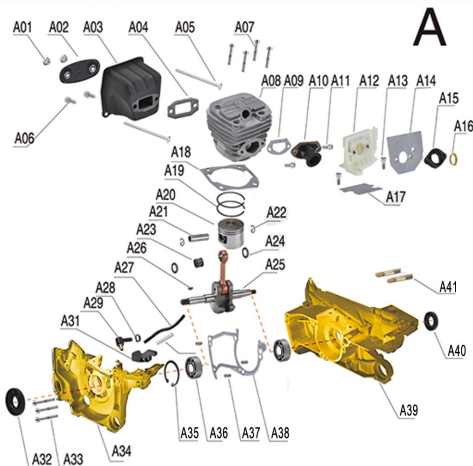


Key	Description	Qty	Key	Description	Qty	Key	Description	Qty
A01	Nut M5	2	A16	Lining ring	1	A31	Guide(LH)	1
A02	Muffler cover	1	A17	Bracket gasket	1	A32	Oil seal(left)	1
A03	Muffler	1	A18	Cylinder gasket	1	A33	Screw M5x30	5
A04	Muffler gasket	1	A19	Piston ring	2	A34	Crankcase(left)	1
A05	Muffler bolts 84	2	A20	Piston	1	A35	Snap ring	1
A06	Screw M5 x 10	2	A21	Piston pin	1	A36	Bearing B202	2
A07	Screw M5 x 20	4	A22	Piston clip	2	A37	Location pin 6x10	3
A08	Cylinder	1	A23	Piston bearings 11x15x15	2	A38	Crankcase gasket	1
A09	Inlet pipe gasket	1	A24	Washer	2	A39	Crankcase(right)	1
A10	Inlet pipe	1	A25	Crankshaft	1	A40	Oil seal(right)	1
A11	Screw M5 x 12	2	A26	Woodruff key 3x10	1	A41	Double-screw bolt M8x42	1
A12	Carburetor bracket	1	A27	Vacuum pipe 13x16x70	1			
A13	Screw M5 x 14	2	A28	Vacuum pipe clip	2			
A14	Asbestos mat	1	A29	Elbow	1			
A15	Spacer	1	A30	High-temperature sleeve	1			

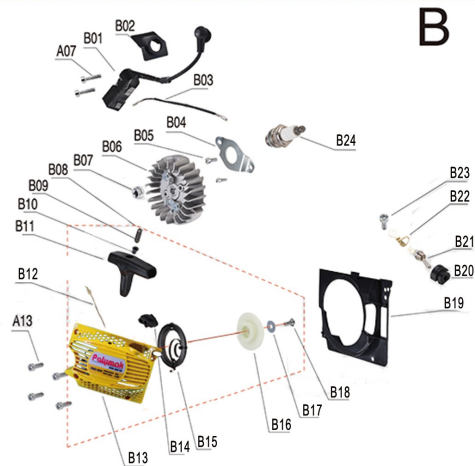


Key	Description	Qty	Key	Description	Qty
B01	Screw M5x20	2	B13	Start cover	1
B02	Ignition coil	1	B14	Guide(LH)	1
B03	Ignition cover	1	B15	Start spring	1
B04	Cord	1	B16	Reel	1
B05	Oil seal plate	1	B17	Washer 452x115x1	1
B06	Screw M4x8	2	B18	Screw ST4.8x16F	1
B07	Flywheel	1	B19	Fan cover	1
B08	Nut M8x1	1	B20	Switch damper	1
B09	Start assy	1	B21	On-off switch	1
B10	Start spring	1	B22	Ground strap	1
B11	Start spring seat	1	B23	Screw M5x10	1
B12	Start knob	1	B24	Spark plug	1
	Start roop 13x50	1			

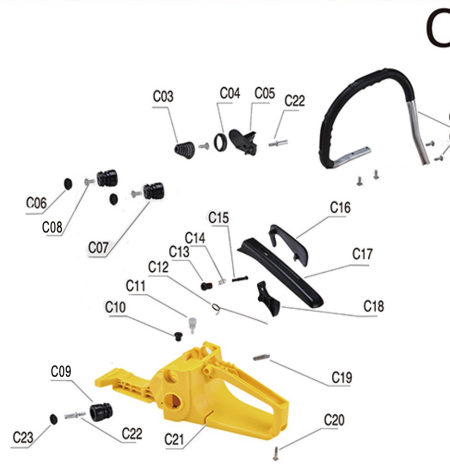


Key	Description	Qty	Key	Description	Qty
C01	Front handle comp	1	C12	Trigger spring	1
C02	Screw ST4.8x16F	4	C13	Knob cap	1
C03	Tower spring	1	C14	Spring	1
C04	Tower spring body	1	C15	Throttle interlock pin	1
C05	Chain catcher	1	C16	Throttle interlock arm	1
C06	Damper cover	3	C17	Rear handle cover	1
C07	Crankcase damper	5	C18	Trigger	1
C08	Screw ST4.8x14F	4	C19	Trigger pin 6x25	1
C09	Fuel tank damper	2	C20	Screw ST3.9x20F	1
C10	Balancer seat	1	C21	Fuel tank	1
C11	Balancer assy	1			

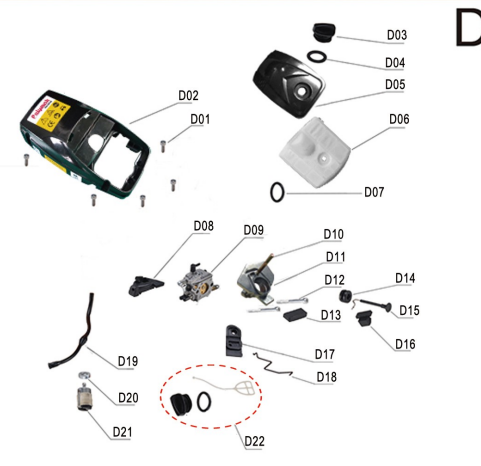


Key	Description	Qty	Key	Description	Qty
D01	Screw	5	D12	Screw M5x50	2
D02	Top cover	1	D13	Manifold damper	1
D03	Air filter cover knob	1	D14	Choke rod damper	1
D04	Washer	1	D15	Choke rod	1
D05	Air filter cover	1	D16	Damper	1
D06	Air filter	1	D17	Dust shield	1
D07	Air filter washer	1	D18	Throttle rod	1
D08	Guide (T)	1	D19	Fuel pipe	1
D09	Carburetor	1	D20	Pendul	1
D10	Stud	1	D21	Fuel filter assy	1
D11	Manifold	1	D22	Fuel cap assy	1

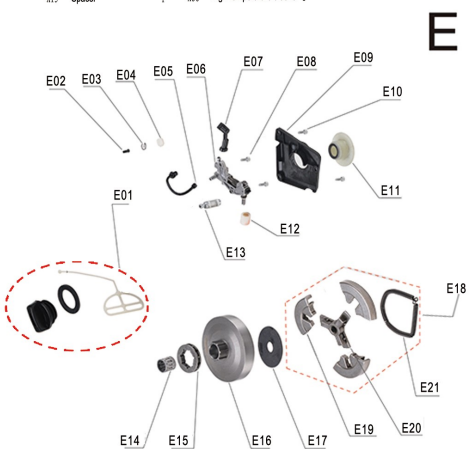


Key	Description	Qty	Key	Description	Qty
E01	Oil cap assy	1	E12	Sealed sponge	1
E02	Oil tank valve	1	E13	Oil filter	1
E03	Oil tank valve retainer	1	E14	Clutch bearing	1
E04	Sponge	1	E15	Sprocket.325	1
E05	Oil pipe	1	E16	Clutch drum	1
E06	Oil pump	1	E17	Clutch washer	1
E07	Oil pump pipe	1	E18	Clutch assy	1
E08	Screw M4x14	2	E19	Clutch wedge	1
E09	Oil pump cover	1	E20	Clutch bracket	1
E10	Screw M4x10	3	E21	Clutch spring	1
E11	Worm gear	1			

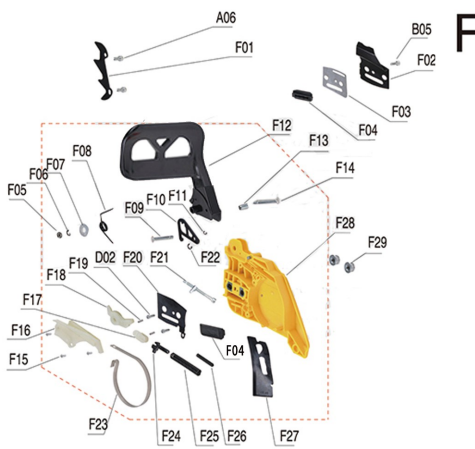

Key	Description	Qty	Key	Description	Qty	Key	Description	Qty
F01	Spike bump	1	F15	Screw	3	F29	Nut M8x1.25	2
F02	Guide Plate	1	F16	Brake spring cover	1			
F03	Guide plate gasket	1	F17	Brake level(Sub.)	1			
F04	Chain guide	2	F18	Brake level(Main.)	1			
F05	Brake damper	1	F19	Brake level pin	1			
F06	Snap ring	1	F20	Tensioned plate	1			
F07	Washer	1	F21	Tensioned sets	1			
F08	Recoil spring	1	F22	Snap ring	1			
F09	Stopper pin	1	F23	Brake belt	1			
F10	Stopper plate	1	F24	Brake arm	1			
F11	Snap ring	1	F25	Brake spring (Main)	1			
F12	Front hand guard	1	F26	Brake spring (Sub)	1			
F13	Front hand jacket	1	F27	Sawdust protector	1			
F14	Guard pin	1	F28	Brake cover	1			

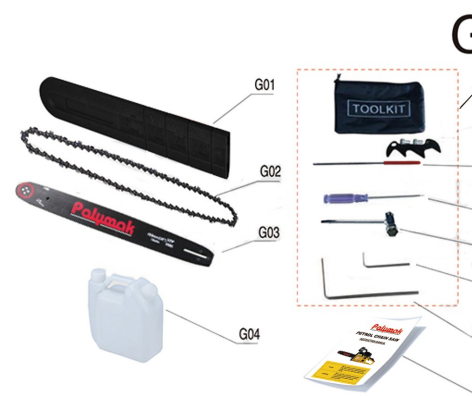

Key	Description	Qty
G01	Guide bar cover	1
G02	POLYMAK chain	1
G03	POLYMAK guide bar	1
G04	Fuel&oil mixing bottle	1
G05	Toolkits	1
G06	File	1
G07	Screwdriver	1
G08	Wrench	1
G09	Spanner S3	1
G10	Spanner S4	1
G11	Manual	1

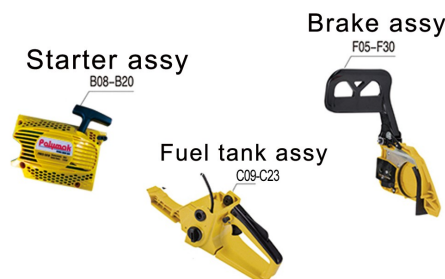

POLYMAK TOOLS(INDIA) PVT.LTD
 186/187,P.H. Road, Alsa Towers, Kilpauk
 Chennai-600 010,INDIA.Tel.:+91-44-26404869
 Fax:+91-44-4285 7854 E-mail:info@polymak.co.in
www.polymak.co.in