

# Product manual

**Please read the product manual in detail before using**

## Electric Cleaning Brush

 
 
### Safety Instructions

- ❖ This product is electric cleaning products, do not use as toys, please refer to the following operating instructions
- ❖ Stay away from flammable and explosive substances at any time
- ❖ Before use, please check whether the brush is securely installed, do not shake the product vigorously .
- ❖ Wear eye shields and gloves when used in conjunction with irritating substances.
- ❖ Do not insert any accessories while the machine is in operation.
- ❖ Please tighten the silicone plug of the charging port when using underwater.
- ❖ When the product is working normally, it is forbidden to press hard and excessively for a long time to stop the machine for a long time.



### Safety instructions for batteries, adapters

- ❖ Under no circumstances should you attempt to remove the battery. If the product case is broken, stop using it and please do not charge it.
- ❖ When charging, keep away from heat, oil, flammable and explosive substances.
- ❖ The adapter can only be applied in standard power and should be aware that the power supply corresponds to the adapter voltage.

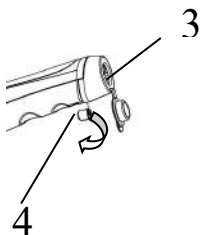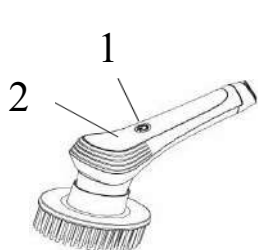

1. Power Switch
2. Indicator Lamp
3. Extension rod socket
4. Charge Port

### Product Parameter

 
Rated input	5V $\overline{=}$ 2A
Working voltage	3.7V $\overline{=}$
maximum power	60W
Battery parameters	18650 3.7V 2600mAh
Working time	About 45 min
Protection grade	IP67
Charging time	About 2H
Telescopic rod size	125*11*20cm
Size of the host	20*11*20cm

### About the product


This product is a hand-held electric cleaning brush, mainly used for the cleaning of the surface, the working principle is to use the motor to drive the brush rotation, to achieve the effect of surface cleaning.

#### Main Feature

- brush easy to dismounting, patents with utility models.
- Various brush to meet different requirements.
- Hand-held position is soft silicone material, durable, environmentally friendly, comfortable feel.
- Built-in power supply for rechargeable use.
- Low voltage operation to make the product safer.
- Easy to operate and convenient for consumers to use.

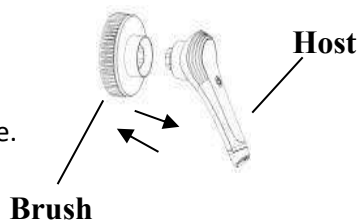

## What's in the Box

 

**Pointy brush**



**Flat brush**



**Sponge**



**Arc brush**



**Scouring Pad**



**Velcro holder**



 
**Towel clot**



**extension rod**



**Host**



**Charging line**



**Product Manual**

 
## Function Information

### Working mode

- Press the power switch for the first time, turn on the machine, and the light color will be green to enter the high speed working mode;
- Press the power switch a second time, the light color remains unchanged, and enters the low speed working mode;
- Press the power switch for the third time to turn off, and the light goes out;
- The light is red and flashing to indicate a lack of power state;
- During charging, the light color is red and flashing;
- After being fully charged, the light color will be green and continuously bright;
- The brush head of this machine stops working when it is blocked, and can work normally after being released. The rotary brush head of this machine stops working and can work normally after being released. (No blocking or stopping for more than 2 minutes)

Charging: Unplug the DC hole silicone plug and insert the DC plug of the adapter into the DC hole. And ensure that the plug end is inserted to the bottom.

Attention: During charging, the light will have a breathing effect; After being fully charged, the light remains on. After fully charging, please unplug the adapter and disconnect the adapter power cord in a timely manner.

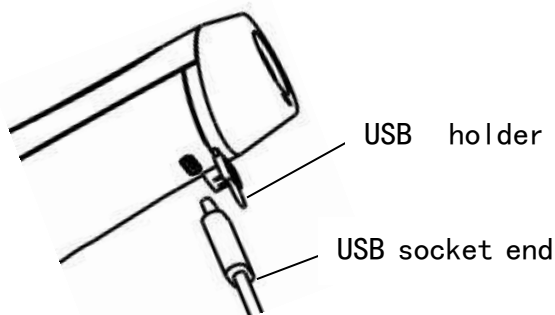

Installation . telescopic rod: Pull out the silicone plug behind the host and rotate the threaded end of the telescopic rod into the threaded hole of the host; Twist and tighten to the correct position; When the telescopic rod is detached from the host, the movable plate on the telescopic rod needs to be lifted first to exit.

