


PMCVWN-DY SPARE PARTS LIST

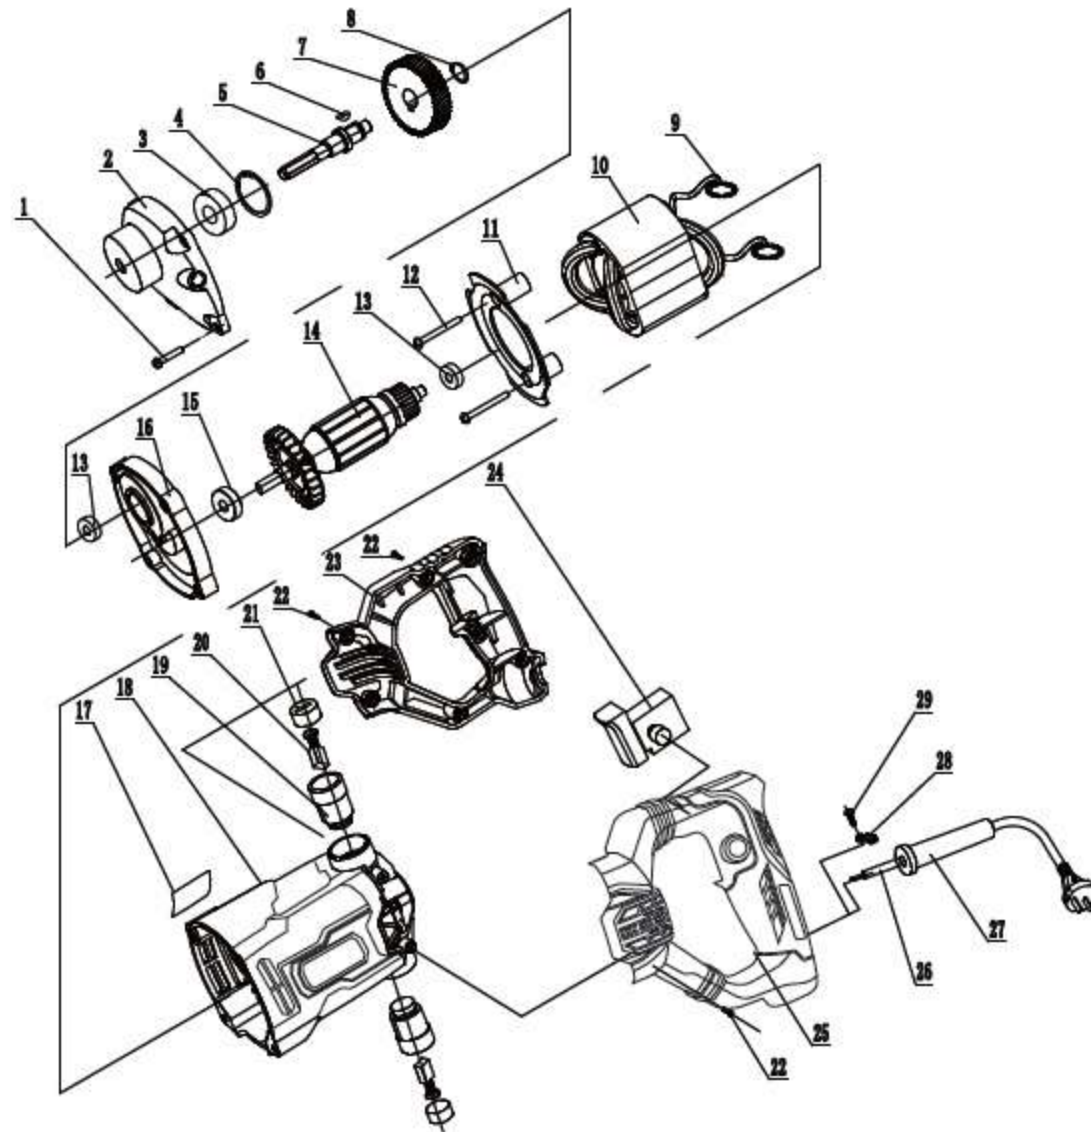

No	Parts Name	Pcs	Seri No	INR
1	Screw ST5*35	4		
2	Gear Box	1		
3	Bearing 6201	1		
4	Ring 32	1		
5	Spindle	1		
6	Key 3*3.7*10	1		
7	Big Gear	1		
8	Washer 12	1		
9	Tension Spring	2		
10	Filed Coil	1		
11	Windshield	1		
12	Screw ST4*16	2		
13	Bearing 60B	2		
14	Armature	1		
15	Bearing 6200	1		
16	Middle Cover	1		
17	Nameplate	1		
18	Housing	1		
19	Brush Holder	2		
20	Carbon Brush	2		
21	Brush Cover	2		
22	Screw ST4*16	9		
23	Left Handle	1		
24	Switch	1		
25	Right Handle	1		
26	Cable	1		
27	Cable Protector	1		
28	Cable Clarp	1		
29	Screw ST4*14	2		